





#KnowNOVA




# 6 easy steps to Optimize your NOVA procedure




Autolab control




Apply 0 V




Cell on




Wait 5 s



CV staircase



Cell off




Export data


**1 START**  
with a default procedure from the Library




**2 FILL IN**  
the relevant **command properties**

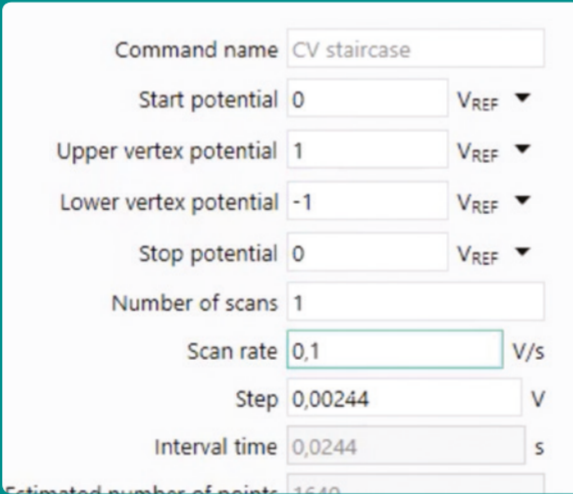


**3 USE LINKS**  
to define relationships

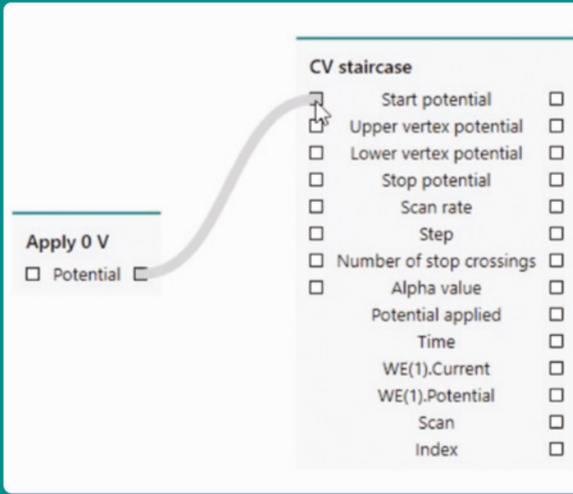

**4 CONFIGURE PLOTS**  
to visualize your data

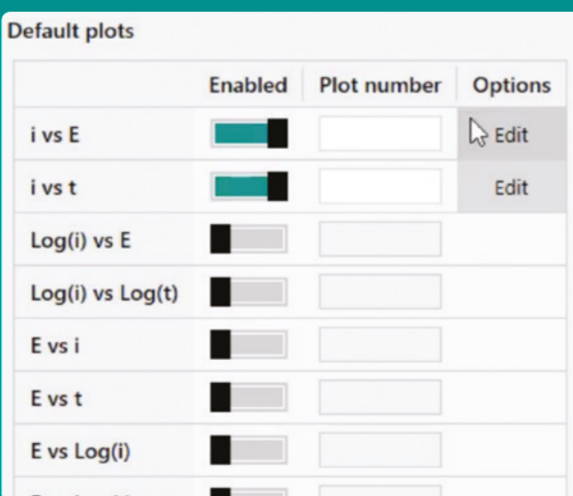

**5 ADD ANALYSIS**  
to automate calculations

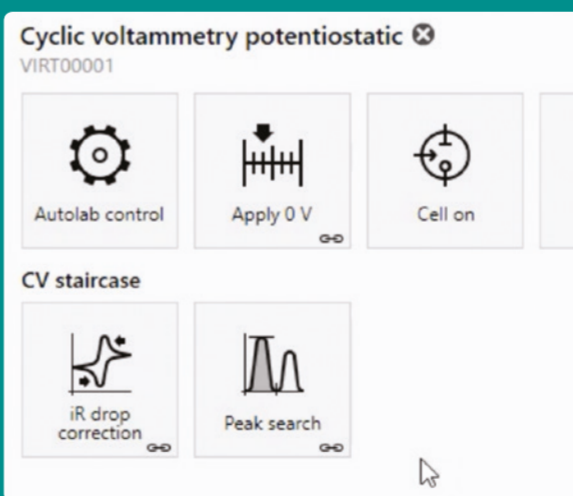

**6 EXPORT RESULTS**  
in the format of your choice

