

Application Bulletin 442/1 e

Check of Optrode with *tiamo*™ and OMNIS

Branch

Chemical; electronics & electronic components

Keywords

Optrode; check; wavelength; no potential change; potential; potential measurement; *tiamo*TM; OMNIS; 6.1115.000; S01; S015; S09; S090

Summary

Before starting a sample analysis, it is essential to know if the electrode is in a good state or not. A properly working electrode guarantees high quality measurements and ensures accurate and precise results. Furthermore, tedious error tracking can be omitted, and no sample is wasted due to a defect or an old electrode.

Several procedures exist to check the health of an electrode. This application bulletin outlines the most convenient process by measuring the potential at different wavelengths in degassed deionized water.

Check of Optrode with *tiamo*TM

Instruments

• Titrando or 867 pH Module

Electrodes

Reagents

Deionized water (degassed)

Check of Optrode

The deionized water is degassed either by allowing nitrogen to flow through for 5–10 minutes or by applying a vacuum for 5–10 minutes. For the measurement, *tiamo*™ is opened and the method as well as the report template are imported. Adjust the method accordingly by choosing the correct measuring device and electrode. In addition, the database command must be adapted so that the data are saved in the corresponding database. Afterwards, the measurement is started and all wavelengths are checked automatically. Two requests will appear on screen: one for entering the serial number, and one for entering the article number. This is required to ensure that the serial and article number appear on the report. At the end, a report is generated which states if the check of the Optrode passes or fails.

Parameters

Mode	MEAS U
Signal drift	2 mV/min
Min. waiting time	300 s
Max. waiting time	600 s



Check of Optrode with *tiamo*™ and OMNIS

Check of Optrode with OMNIS

Instruments

OMNIS Titrator with analog measuring module

Electrodes

Optrode	6.1115.000
OMNIS adapter cable	6.02109.000

Reagents

· Deionized water (degassed)

Sample preparation

No sample preparation is required.

Check of Optrode

The deionized water is degassed either by allowing nitrogen to flow through for 5–10 minutes or by applying a vacuum for 5–10 minutes. For the measurement, **OMNIS** software is opened and the operation procedure with a work system is imported. Adjust the work system accordingly by choosing the correct measuring interface and electrode. Afterwards, the measurement is started and all wavelengths are checked. In between measurements, the wavelength must be adjusted manually by placing a magnet against the head of the Optrode (sign with magnet). Ultimately, a report is generated that states if the check of the Optrode passes or fails.

Parameters

Mode	MEAS U
Signal drift	2 mV/min
Min. waiting time	300 s
Max. waiting time	600 s

Comments

- A minimum waiting time of 300 s was programmed to ensure that the full light intensity of the Optrode is reached
- Make sure that the deionized water is properly degassed. Otherwise, air bubbles might disturb the check of the Optrode.
- To pass the check of the Optrode, the following criteria must be met:

Wavelength in nm	Lower limit mV	Upper limit mV
470	150	800
502	200	800
520	200	800
574	200	800
590	200	800
610	200	800
640	200	800
660	200	800

- Please contact your local Metrohm Service dealer for the appropriate methods and the report template.
- If a check of the Optrode fails, contact your Metrohm Service dealer. They can help adjust the light intensity of the Optrode.

Author

Competence Center Titration

Metrohm International Headquarters



Check of Optrode with *tiamo*™ and OMNIS

Appendix

Example reports $tiamo^{TM}$ and OMNIS

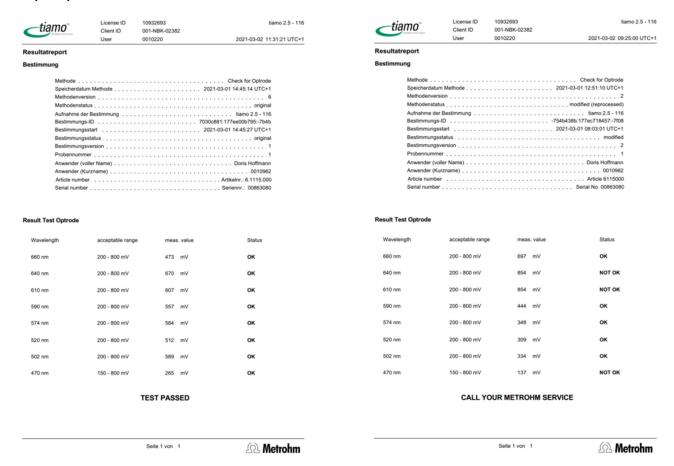


Figure 1: Example of a passing Optrode check report generated with $\textit{tiamo}^{\text{TM}}.$

Figure 2: Example of a failing Optrode check report generated with \emph{tiamo}^{TM} .



Check of Optrode with $\textit{tiamo}^{\text{TM}}$ and OMNIS

R	e	S	u	ı	t

Result name	Value Unit	Mean value	s(abs)	s(rel)	n
Potential 470 nm	294 mV				
Potential 502 nm	562 mV				
Potential 520 nm	511 mV				
Potential 574 nm	452 mV				

2/9

Result name	Value Unit	Mean value	s(abs)	s(rel)	n
Potential 590 nm	471 mV				
Potential 610 nm	551 mV				
Potential 640 nm	655 mV				
Potential 660 nm	444 mV				
Passed?	Test for Optrode passed				

Result monitoring

Variable	Value Unit	Status	Min. (warn.)	Max. (warn.)	Min. (control)	Max. (control)
Measvalue.F inal.Potenti al measureme nt 470 nm	294 mV	•	150	800		, , ,
Measvalue.F inal.Potenti al measureme nt 502 nm	562 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 520 nm	511 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 574 nm	452 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 590 nm	471 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 610 nm	551 mV	•	200	800		
Variable	Value Unit	Status	Min. (warn.)	Max. (warn.)	Min. (control)	Max (control)
Measvalue.F inal.Potenti al measureme nt 640 nm	655 mV	•	200	800	. ,	
Measvalue.F inal.Potenti al measureme nt 660 nm	444 mV	•	200	800		

Figure 3: Example of a passing Optrode check report generated with $\mathbf{OMNIS.}$

Results

Result name	Value Unit	Mean value	s(abs)	s(rel)	n
Potential 470 nm	293 mV				
Potential 502 nm	564 mV				
Potential 520 nm	511 mV				
Potential 574 nm	2 mV				

2/9

OMNIS

Result name	Value Unit	Mean value	s(abs)	s(rel)	n
Potential 590 nm	481 mV				
Potential 610 nm	556 mV				
Potential 640 nm	647 mV				
Potential 660 nm	438 mV				
Passed?	Test for Optrode not passed. Call your Salesrep for Support				

Result monitoring

Variable	Value Unit	Status	Min. (warn.)	Max. (warn.)	Min. (control)	Max. (control)
Measvalue.F inal.Potenti al measureme nt 470 nm	293 mV	•	150	800	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	
Measvalue.F inal.Potenti al measureme nt 502 nm	564 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 520 nm	511 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 574 nm	2 mV	A	200	800		
Measvalue.F inal.Potenti al measureme nt 590 nm	481 mV	•	200	800		
Measvalue.F inal.Potenti al measureme nt 610 nm	556 mV	•	200	800		
Variable	Value Unit	Status	Min. (warn.)	Max. (warn.)	Min. (control)	Max. (control)
Measvalue.F inal.Potenti al measureme nt 640 nm	647 mV	•	200	800		7
Measvalue.F inal.Potenti al measureme nt 660 nm	438 mV	•	200	800		

Figure 4: Example of a failing Optrode check report generated with $\mathbf{OMNIS.}$